




How to set stop collar

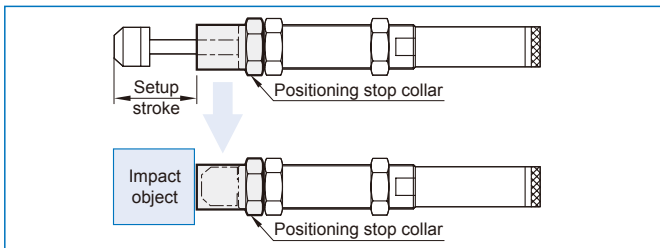

SC series - stop collars

Shock absorbers stop collars are available from M8 ×1.0 to M36×1.5 and suitable for shock absorbers with or Without impact head. They also can be used for adjusting and fixing position.

Optional accessories

| Model | Dimensions | Applicable for shock absorber model |
|-------|-------------|---|
| SC08 | M8×1.0 | MAC0806 |
| SC10 | M10×1.0 | MAC1005 MAC1007 |
| SC12 | M12×1.0 | MAC1210 MAD1210 MACD1210 |
| SC14 | M14×1.5 | MAC1412 MAD1410 MAC1415 MAD1415 MAC1416 MAD1425 MAC1420 MAC1425 |
| SC20 | M20×1.5 | MAC2015 MAD2020 MAC2020 MAD2025 MAC2025 MAD2050 MAC2030 MACD2030 MAC2050 MACD2035 MAC2065 MACD2050 |
| SC25 | M25×1.5 | MAC2525 MAD2525 MAC2540 MAD2530 MAC2550 MAD2540 MAD2550 MAD2580 |
| SC27 | M27×1.5 | MAC2725 MAD2725 |
| SC36 | M36×1.5 | MAC3660 MAD3625 MAD3650 |

Flanges - F series

| Model | Dimensions | Applicable for shock absorber model | Weight (g) |
|-------|------------|-------------------------------------|------------|
| F36 | | MAC3660 MAD3625 MAD3650 | 282 |
| F42 | | MAD4225 MAD4250 MAD4275 | 236 |
| F64 | | MAD64050 MAD64100 MAD64150 | 540 |